



K. B. Canham

K. B. C A N H A M
C A M E R A S
I N C.

Folding instructions for 4 x 5, 5 x 7, 4 x10 and 8 x 10

1. Unlock all tilts, swings, rise & fall and lateral shift.
2. Rack the rear standard out 2.5 inches.
3. Rack in the front standard until the standard's front edge is flush with the bed of the camera.
4. Raise the lens board as far as possible on the front standard.
5. Fold the front standard down onto the bed of the camera. Make sure that the top of the rise and fall rails for the front standard are resting on the bed of the camera. (This may require locking the focus rails.) *
6. Move the lens board frame on the rise rails as far forward as possible.
7. Rack the rear standard forward.
- 8, Fold the back down and engage latches.

* If the wide angle bellows is installed on the camera, the bellows should be disconnected from the front standard before folding.

When removing the back of the camera, to go from horizontal to vertical, care needs to be taken. Forcing the back could break the lip on its perimeter.

The following sizes of hex keys, (Allen Wrenches) , 0.050, 1/16, 3/32. 1/8 are used on the bolts of the camera.